



TYPICAL SECTION  
RIGHT-OF-WAY MONUMENTATION

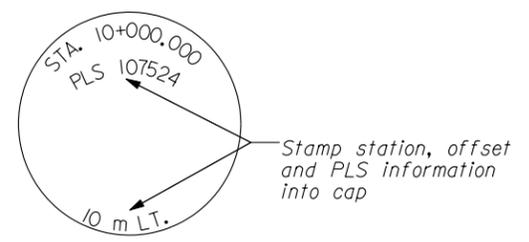


CAP DETAIL

NOTE:


1. Right-of-Way Witness Post:  
Set a 1830 mm long flexible plastic post. Right-of-Way witness posts should be brown, green or other suitable colors to match surroundings. Attach a "Survey Marker Witness" plaque to the post. Station, offset and PLS date of survey should be permanently attached to the front of the post facing the designed alignment.
2. Witness post to be used when Right-of-Way witness post assembly is required.
3. Set monuments using a professional land surveyor according to the requirements of the state code.
4. Station and distances based on Right-of-Way centerline.
5. Install markers so that the center of the cap is not more than 13 mm from the point established.
6. Dimensions not labeled are in millimeters.

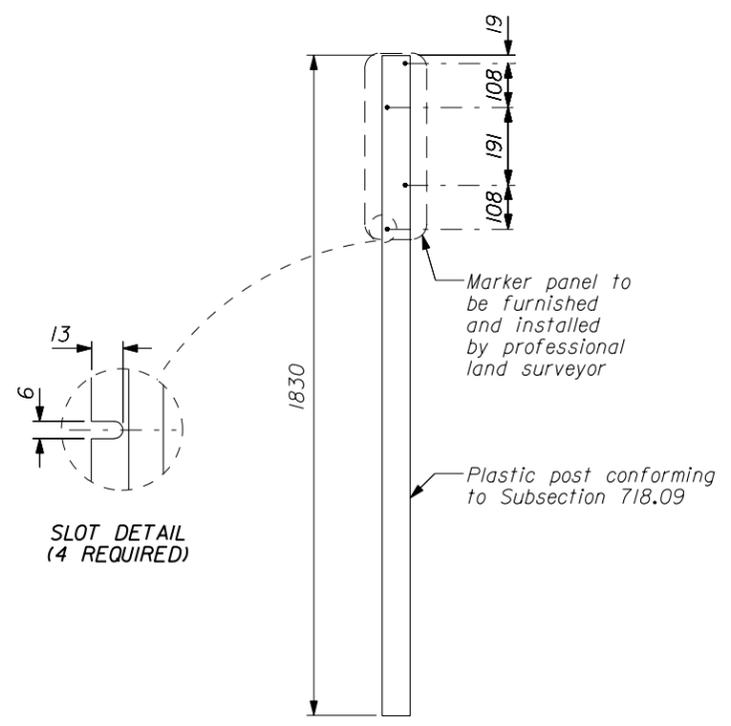

RIGHT-OF-WAY WITNESS POST  
ASSEMBLY DETAIL

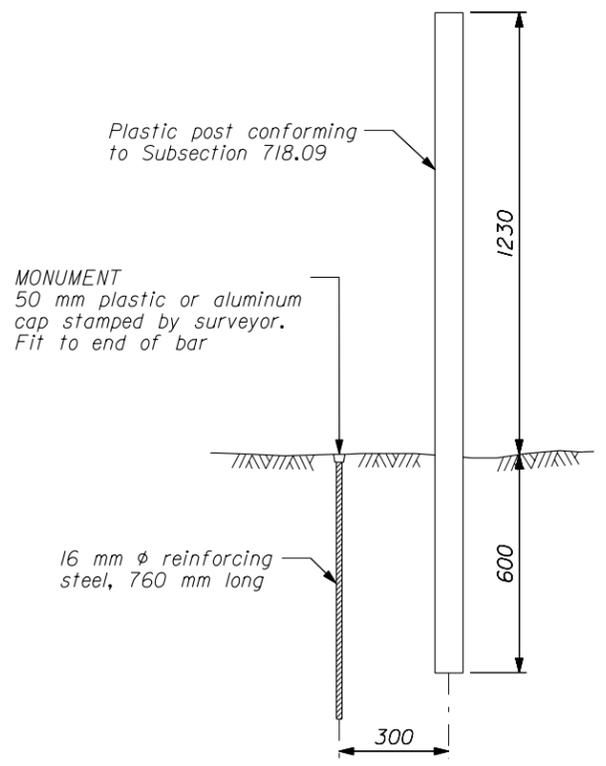

RIGHT-OF-WAY MONUMENT  
AND WITNESS POST  
EARTH INSTALLATION

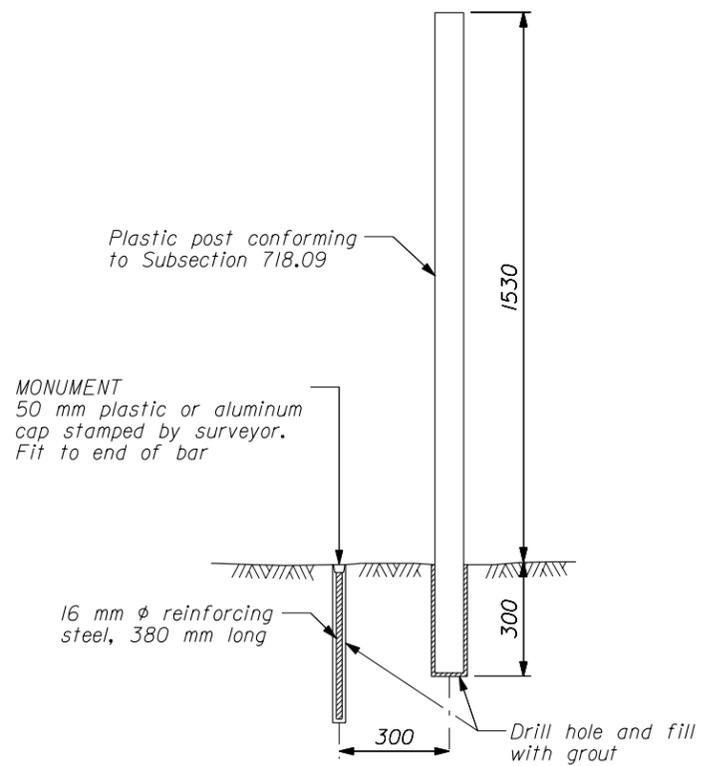

RIGHT-OF-WAY MONUMENT  
AND WITNESS POST  
SOLID ROCK INSTALLATION

U.S. DEPARTMENT OF TRANSPORTATION FEDERAL HIGHWAY ADMINISTRATION WESTERN FEDERAL LANDS HIGHWAY DIVISION	
METRIC DETAIL	
RIGHT-OF-WAY MONUMENTATION	
DETAIL APPROVED FOR USE 5/2003	DETAIL WM621-1
REVISED:	

F:\StationDraw\Western\wm62101.dgn 19-May-2003 12:50 PM